

New Standard Molding Installation Instructions

New Standard Moldings are vinyl wrapped and feature a waterproof plastic core with the exception of the quarter round which has an MDF core. The 94" long moldings are available in T-Molding, Reducer, Baby Threshold, Stair Cap, Flush Stair Nose and Quarter Round. The T-Molding and Reducer easily snap into the included plastic strip.


Quarter Round




Quarter Round Installation Instructions

1. Measure and trim to fit.
2. Attach molding to floor using finish nails or adhesive.

T-Molding

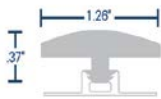


Reducer

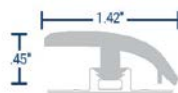

T-Mold and Reducer Installation Instructions

1. Measure and trim to fit.
2. Attach track to floor using adhesive, nails or screws.
3. Insert molding into track. Tap down with a rubber mallet.

Baby Threshold

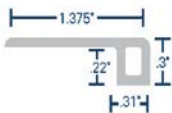

Baby Threshold Installation Instructions

1. Measure and trim to fit.
2. Affix molding to floor using finish nails or adhesive.



Stair Cap Installation Instructions

1. Measure and trim to fit.
2. Affix molding to the stair edge using adhesive.

FLUSH STAIR NOSE



Flush Stair Nose

1. Measure and cut nosing to fit.
2. Dry fit the molding to ensure it is sized appropriately.
3. Scuff/Abrade the underside of the nosing with coarse sandpaper.
4. Clean/Wipe the underside of the nosing with denatured alcohol and allow to dry.
5. Prep the substrate; remove any surface contaminants (and/or) moisture.
6. Apply premium construction adhesive liberally in an "S" pattern (or) use molding tape to secure the nosing (see: <http://www.1877floorguy.com/hilway-direct-molding-tape.html>)
7. Slowly insert the nosing, ensuring a flush fit to the stair edge and butt tightly against flooring.
8. Apply direct pressure and secure with weights/sandbags (or) pre-drill and insert finish nails (depending on local building code requirements).
9. Fill nail holes with a like colored putty.

Adhesive: Beaulieu recommends using a construction adhesive similar to Liquid Nails or Hillway Direct molding tape, available at 1877Floorguy.com. <http://www.1877floorguy.com/hilway-direct-molding-tape.html> or a similar tape. The adhesive manufacturer's recommendations must be followed completely.

Nails or Screws: Beaulieu recommends using wood screws or nails with a flat head to attach the molding track to the floor.

Finish Nails: When installing the quarter round or baby threshold using finish nails, the installer will need to use a nail set and putty the nail holes with appropriately colored wood putty available at most hardware stores.